



NOTES:  
1. U39, U40, CR9, AND CR10 NOT USED  
2. IF RADIO SHACK KEYBOARD IS USED  
REMOVE U34



